



DINAN

**EMBLEM
INSTALLATION INSTRUCTIONS**

PART NUMBERS: D710-0410(-C, -MB, -GB)
D710-0430(-C, -MB, -GB)
APPLICATION: Various

These DINAN emblems are installed onto the trunklid. The recommended position depends on the model of the vehicle:

- Non-M vehicles – the DINAN emblem replaces the existing model badge on the right-side of the trunklid.
- M vehicles – the DINAN emblem will be on the left-side of the trunklid, level with the M-badge on the right-side.

Please refer to the appropriate steps below for your vehicle.



FOR non-M VEHICLES ONLY:

1. The Dinan emblem will be installed on the right side of the trunk lid (see sample picture below), taking the place of the vehicle model emblem.
2. To create a horizontal reference, lay a strip of masking tape with its top edge at the same height as the bottom of the vehicle badge. Ensure that the tape is horizontal.
3. Mark the lower right corner of the stock badge on the tape.
4. Remove the stock badge. To avoid scratching the paint, use a length of dental floss to separate the letters from the trunk lid (see example picture below).
5. Using a little "wax and silicone remover" or mild window cleaner on a clean rag, prepare the painted surface of the trunk lid for installation.
6. Press the clear positioning sheet onto each Dinan emblem letter to help the individual pieces stay aligned during installation.
7. Carefully peel the paper backing away from the emblem, leaving the pieces attached to the clear positioning sheet. To retain the proper letter spacing, **DO NOT SEPARATE THE INDIVIDUAL PIECES FROM THE CLEAR SHEET!**
8. Slide the badge horizontally until the right edge of the Dinan emblem is aligned with your mark, and verify that the letters are parallel to the masking tape.
9. When satisfied with the position, let the pieces touch the trunk lid.

These steps apply to non-M vehicles only

These steps apply to non-M vehicles only

10. Check for straightness, and then press on entire length of emblem for permanent installation. Be careful to line up the emblem correctly before installation since the adhesive backing is designed for one use only.
11. Peel clear positioning sheet away from the letters.
12. Clean any adhesive residue from the individual letters.

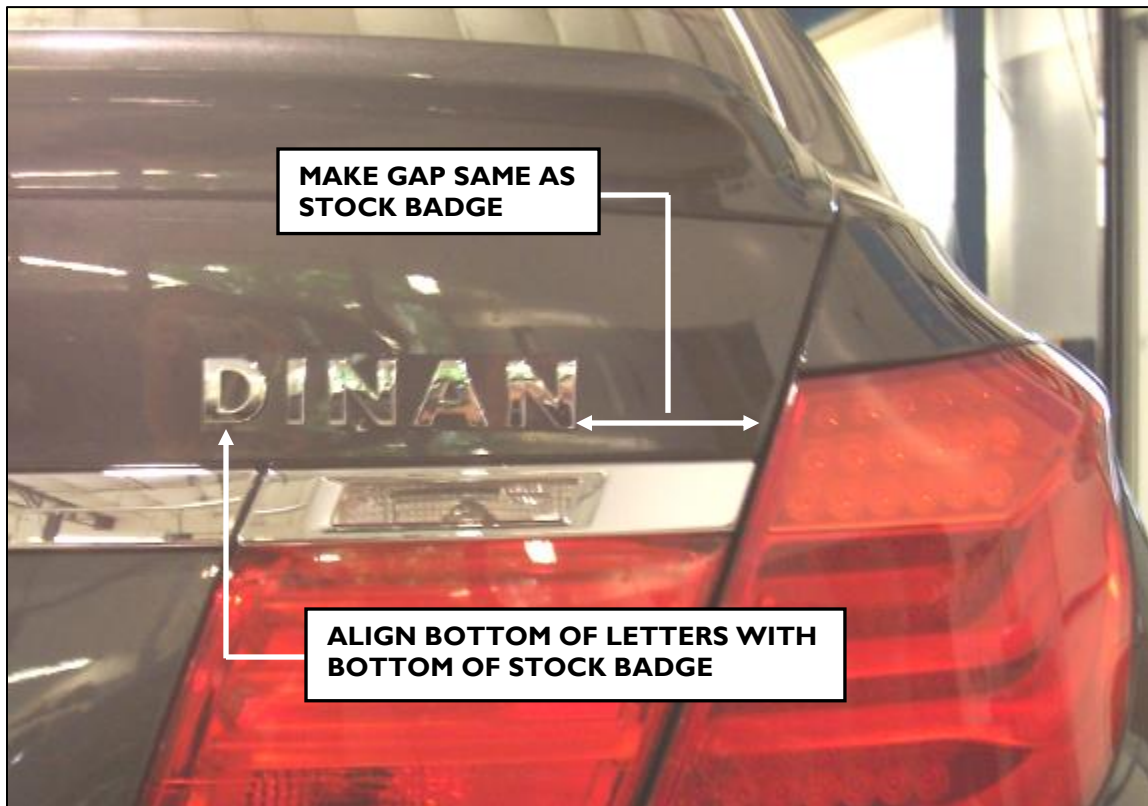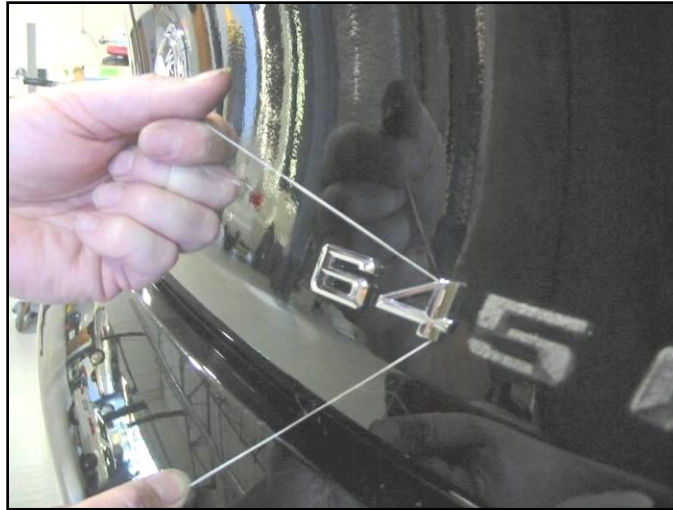

FOR M VEHICLES ONLY:

1. The Dinan emblem will be installed on the left side of the trunk (see picture below), level with the existing ///M badge on the right side.
2. To create a horizontal reference, lay a strip of masking tape with its top edge at the same height as the bottom of the ///M badge. Ensure that the tape is horizontal.
3. Using a little "wax and silicone remover" or mild window cleaner on a clean rag, prepare the painted surface of the trunk lid for installation.
4. Carefully peel the paper backing away from the emblem, leaving the pieces attached to the clear positioning tape. To retain the proper letter spacing, **DO NOT SEPARATE THE INDIVIDUAL PIECES FROM THE CLEAR TAPE!**
5. Slide the badge horizontally until the gap with the taillight is the same as the ///M badge on the right side (see figure), and verify that the letters are parallel to the masking tape. When satisfied with the position, let the pieces touch the trunk lid.
6. Check for straightness, and then press on entire length of emblem for permanent installation. Be careful to line up the emblem correctly before installation since the adhesive backing is designed for one use only.
7. Peel clear positioning tape away from the letters.
8. Clean any adhesive residue from the individual letters.

